


## POLTRACK JOGGING TRACK SYSTEM SHOCK-PAD ISOPOL-EPDM

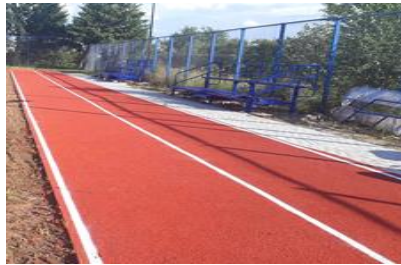

Elastic, seamless, flexible colored flooring, ideal for jogging tracks.

It consists of a shock-pad base of 2 layers, first layer is a base layer of prefabricated, shock-pad roll and second layer a base of flexible, colored EPDM granules (0.5-1.5mm). Then follows a PU flexible pore filler coating, **POLYSPORT STUCCO 1050**, in 2 layers and a sealing PU, UV-resistant, aliphatic top layer, **POLYSPORT 1052**, in two crossing layers.

The success in the application depends on the right preparation of the underlay and use of the material.

### Steps:

#### 1. PU FLEX 140 - Special, polyurethane, two-component adhesive.

It is applied, with a V-notch trowel, on dry waterproof surfaces of concrete, without rising humidity issues or asphalt. Used for the application of ISOPOL 854 shock-pads or other prefabricated shock-absorbent rolls made from recycled rubber or EPDM.

#### 2. ISOPOL 854 - Shock-pad in rolls.

Elastic, prefabricated shock-pad made of recycled rubber providing shock-absorbency. Used as cushion substrate before the application of polyurethane or acrylic systems.

#### 3. Mixture of PU BINDER 1118 and EPDM 856 (in granulometry of 0.5-1.5mm) applied by paving machine.

#### 4. POLYSPORT STUCCO 1050 - Polyurethane, elastic, two-component pore filler.

Used for sealing porous prefabricated subfloor of sports floorings such as ISOPOL 854 or wet-pour cushion shock-pads. Applied by flat trowel.

## 5. POLYSPORT 1052 - UV-resistant, polyurethane, aliphatic, two-component top coating for outdoor sports flooring.

Applied, in two crossing layers by airless sprayer or a short haired mohair roller.

### Preparation – Application

**Applied only on dry asphalt and concrete surfaces (over 30 days old from date of placement) without rising humidity issues and free of materials that might prevent bonding e.g. dust, loose particles, grease etc.** The success in the application depends on the right preparation of the underlay and use of the material.

- **Good, dry** cleaning of the surface from dust and residues with vacuum cleaner and squeegees.
- Application of polyurethane glue, **PU FLEX 140**, with V-notch trowel with 2mm teeth. Consumption: 1kg/m<sup>2</sup>.
- Place the **ISOPOL 854** rolls on the floor in their final positions without gluing them. Lift each side of each roll and apply the PU glue by a V-notch trowel with 2mm teeth and then glue the rolls immediately without waiting. In case there are small bulges (humps, swollen parts) on the roll after its application, you'll have to tear it around the edge of the hump without removing it completely, raise that small part, put some PU glue underneath and glue the hump part again, making sure this time it's flat. Weights such as sandbags have to be used on the edges, corners and seams of the shock absorbent roll surface installation until the PU glue is cured. Then you let everything dry. Do not overlap the rolls but bring them as close together as possible to eliminate gaps. The usage of a light cylinder (10-15kg maximum) will help to compact the rolls on the floor. It is recommended that the joints (only) are covered flush with ELASTOTURF 851 or PU FLEX 140 with a flat trowel (or a brush) along their whole length, so that the surface is leveled out. Next day the joints are ground lightly with sandpaper or other grinding device to smooth out the joints with the rest of the surface and create the required roughness.
- Application with paver machine of a mixture of **PU BINDER 1118** with epdm granules **EPDM 856**.
- Application of polyurethane pore filler **POLYSPORT STUCCO 1050** with metal trowels to create a completely nonporous surface with consumption 0,8kg per square meter.
- The next day, depending ambient temperature follows application of finishing paint **POLYSPORT 952 in 2 crossing layers by a short-haired mohair roller or even better by airless spray**. Consumption: 0,25 kg per square meter in 2 layers.

## Important Remarks

- ✓ During temperatures over 40 degrees, ideal time for the application of **POLTRACK JOGGING TRACK SHOCK-PAD ISOPOL** is between 22:00 and 09:00 and the minimum bearing temperature during application and drying should be over 10°C.
- ✓ In case the second layer of PU pore filler is applied after more than 24 hours of the application of the first one then the whole surface must be sanded by a special sanding machine. After that the second layer can be applied.
- ✓ In case the second layer of PU topcoat is applied after more than 24 hours of the application of the first one then the whole surface must be sanded by a special sanding machine. After that the second layer can be applied.
- ✓ The freshly coated surface should be protected from high temperatures, wind, rain and frost for at least the first 24 hours.

## Substrate

**Asphalt is the safer subfloor for sport floorings for sure and must be always preferred than concrete surfaces.**


### **A. Asphalt Substrate**

**The asphalt must have a slope of 0.7-1% and must dry for at least 30 days so that all solvents from the asphalt can evaporate.**

The asphalt sub-floor should be applied on well compacted 150mm road base sub-floor and asphalt should be laid in one layer (and not 2) in 6 to 8cm with fine and coarse aggregates (up to 15mm granulometry) like the kind of asphalt used in road construction.

So, new road-grade asphalt will have to be laid (minimum 60mm) in one layer containing coarse aggregates and then mature for 30 days at least, before any application takes place on top of the asphalt to avoid bubbles on the final layer of the sport or rubber floorings.

## Asphalt Infrastructure

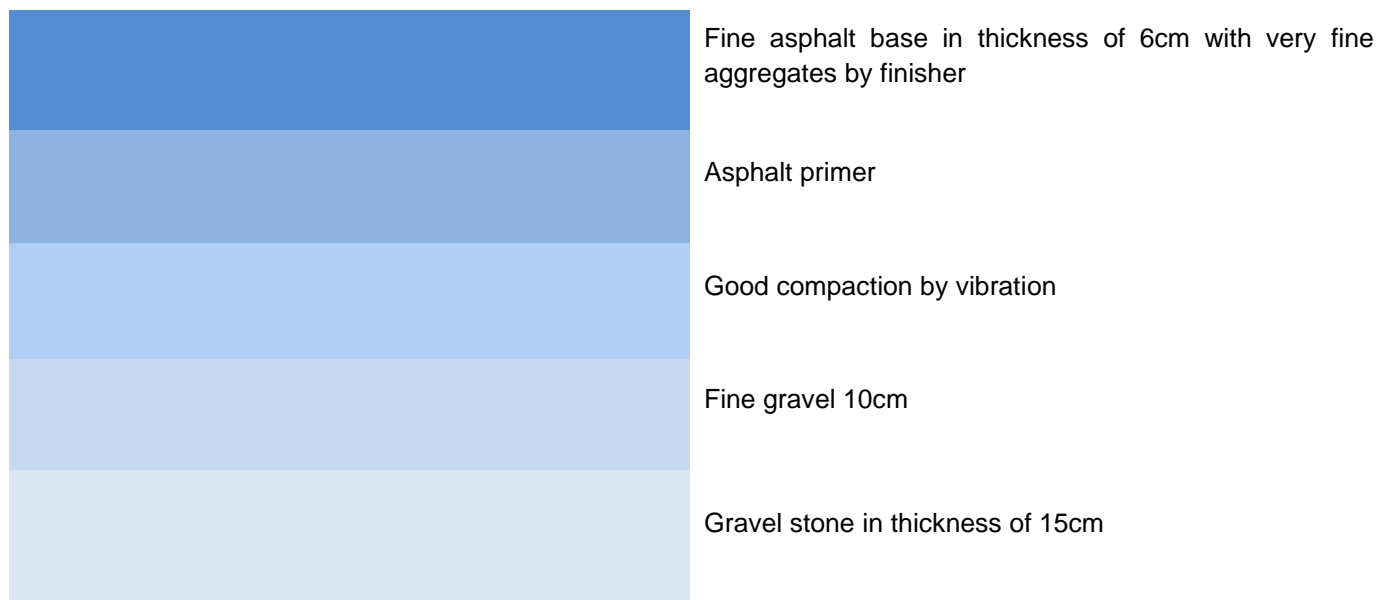


### B. Concrete Surface

Concrete surface must be power-trowelled without cracks and must be smooth with a slope of 0.7-1% and humidity under 4% in 10cm depth of concrete.

Concrete must also be **dry at least for 40 days** and then the application takes place if there is no rising humidity for the sub-floor. Before the application takes place, there must be proper grinding of the surface by a grinding machine to open the pores accordingly and also a measurement by special instrument to measure humidity on the surface and in 10cm under the surface.

Generally concrete is a risky sub-floor and there may be problems with rising humidity, especially in areas where the sea level is really high and when the sea is close or in areas near greenery.

**Always make expansion joints in large areas of concrete, in order to avoid uncontrollable cracks and failures.** Joints should be every 25 square meters creating a grid of 5x5 meters or close to that.

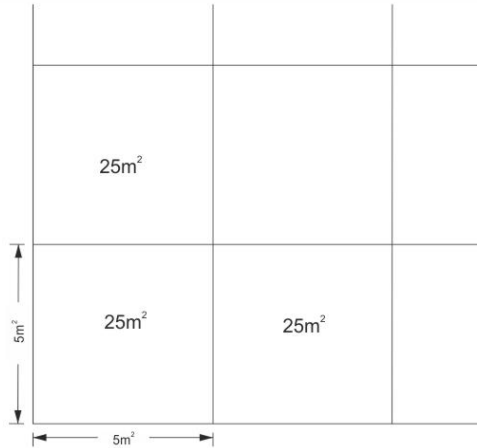

## Substrate requirements

Concrete quality	at least C20/25
Age:	at least 40 days
Moisture content:	below 4%

## Tools:



**KDF - Kataskeves Dapedon LTD**  
e : [exports@kdf.gr](mailto:exports@kdf.gr) w : [www.kdf.gr](http://www.kdf.gr)

**Showroom Office**  
19<sup>th</sup> km National Road Thessaloniki-Moudania  
57001, Neo Rysio, Thessaloniki, Greece  
t / f : +30 2310 829598

**Accounting Office**  
19 Mitropoleos Str  
54624, Thessaloniki, Greece

